

RICOH

User's Manual

EN

AC Adapter D-AC166

Thank you very much for purchasing our product. To make the best use of this product's functions, read this manual thoroughly before use.

Package Contents

- AC adapter
- AC plug cord

Safety Precautions


We have paid close attention to the safety of this product. When using this product, we request your special attention regarding items marked with the following symbols.

Warning

This symbol indicates that ignoring this item could cause serious personal injuries.





 


Caution

This symbol indicates that ignoring this item could cause minor or medium personal injuries, or loss of property.

 is a symbol indicating items that are prohibited.

 is a symbol emphasizing a warning.

Warning

-  Do not use the product at a voltage other than the specified voltage. Using the product with an unspecified power or voltage can cause a fire or electric shock. The specified voltage is 100-240 V AC.
-  Do not disassemble or modify the product. This can cause a fire or electrical shock.
-  Do not use the product for cameras other than the specified digital cameras.
-  If the generation of smoke or strange odor from the product or other abnormality occurs, immediately discontinue using and contact your nearest service center. Continued use can cause a fire or electrical shock.
-  If water should happen to get inside the product, contact your nearest service center. Continued use can cause a fire or electrical shock.
-  If you see a lightning flash or hear thunder during use of the product, unplug the power cord and discontinue using. Continued use can cause damage to the product, fire, or electrical shock.
-  Wipe off the plug of the power cord if it should become covered with dust. Accumulated dust may cause a fire.

R02DTA19

Printed in Japan